



GET READY TO PROTECT YOUR FACE WITH YOUR BRAND NEW FACE SHIELD FROM NOCRY

Thanks for joining the NoCry pack and choosing us. You're the reason we can make high-quality everyday-use products that are as hard-working (and hard-wearing) as you.

We'd love to help you make the most of your brand new Face Shield. That's why we've put together some handy instructions. Read on to discover how to set up your visor for the first time and how to look after it so it lasts.


READY TO START USING YOUR FACE SHIELD?

Get your shield set up by following these simple steps. (Want to watch an instructional video instead of reading?

Watch it here:
nocry.com/instructions

1

Take the plastic visor and the padded, adjustable headband out of the package and lay them out on a clean, flat surface like your kitchen table or counter. Keep the second visor as a spare.

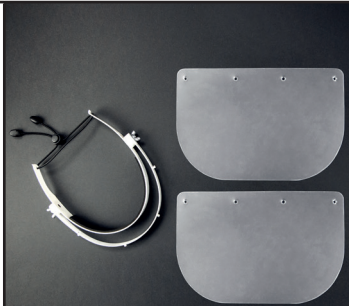

LOOKING AFTER YOUR FACE SHIELD IS QUICK AND EASY – ALL YOU NEED IS SOME SOAP, WATER AND A SOFT CLOTH

To clean your face shield, just detach the visor from the headband, remove the metal swivels and set them down on a clean, dry surface. Wash the headband and visor with warm water and a gentle soap, then dry them with a soft cloth. You can also disinfect your visor with some diluted alcohol.

2

Peel the plastic protective film from the side facing you. When you're done, flip it over and peel the film from the other side.

TIP: Attach a small piece of household tape to the corner of the visor and use a peeling motion to lift the tape together with the film off the visor.



When you're cleaning your visor and headband, keep water and other abrasive liquids and disinfectants away from the metal swivels – this will keep them running smoothly for longer.

When your visor is clean and ready for storage, pop it in a clean, dry bag and store it somewhere it won't get scratched.

3

Holding the headband in one hand – with the arrows facing up – carefully attach the plastic visor to the headband using the pre-made holes. Never attach both visors at the same time.



THE RIGHT FACE SHIELD, FOR THE RIGHT OCCASION

Your brand new face shield is perfect for protecting your face from different liquids and debris. If you're in healthcare, dental work or cosmetology, this light and flexible shield will keep nasty particles away from your face.

If you're looking for something more robust though, check out the NoCry Forestry Helmet.

4

Your shield's ready to use. Just slip the headband over your head and adjust the back for the perfect fit. And if you want to flip your visor up, use the metal swivels on either side of your headband to adjust the setting. **Check that the swivels are properly fastened before each use.**



HOW DO YOU LIKE YOUR NEW NOCRY FACE SHIELD?

Help customers just like you make better choices by sharing an honest review of your experience on [amazon](https://www.amazon.com) or ★ Trustpilot

Your feedback helps us serve you better and it helps others choose the best products.

To leave us a review on
Amazon > go to Orders > Write a product review

To leave us a review on
Trustpilot > search NoCry > Write a review